


# ARCTIC TRACE®

## Plumbing Vent Hoarfrost Freeze Protection Application

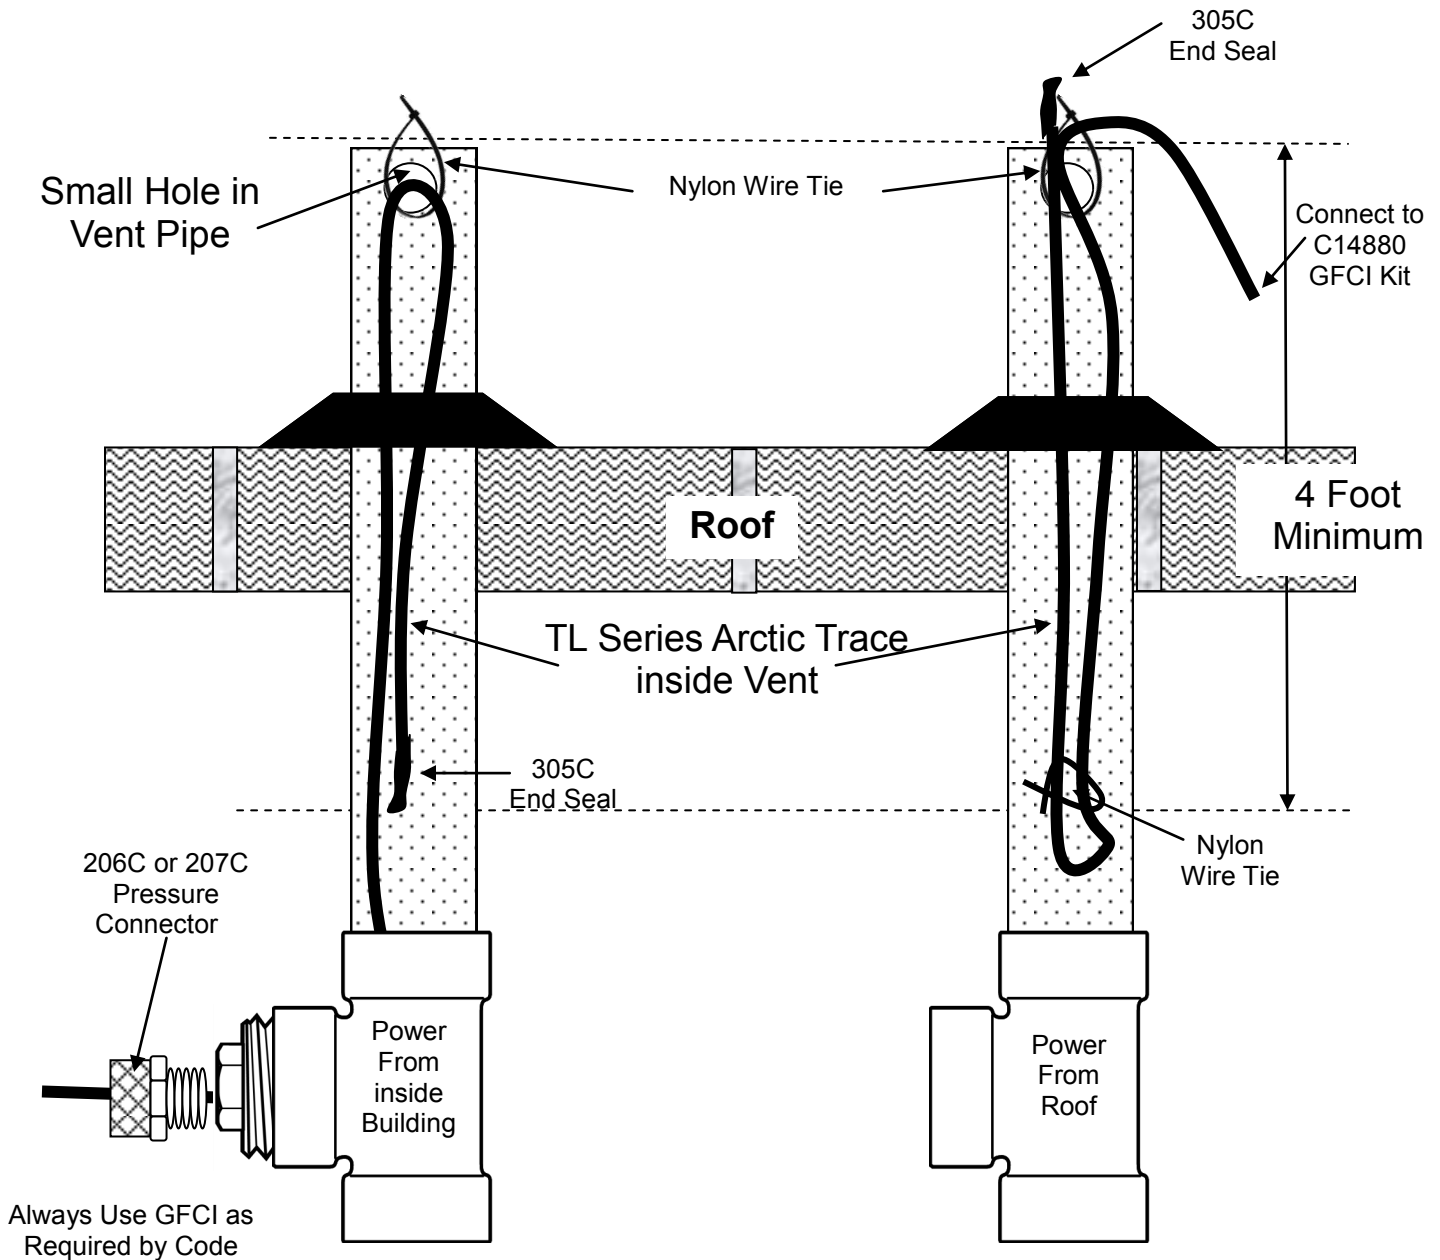

TL Series Arctic Trace model  
Z121012CBTL, 10 watt per foot at  
120Vac.

- Install cleanout with ½" female NPT connection.
- Loop Arctic Trace in vent pipe over itself for a minimum of a 4' loop as shown
- Drill hole in vent pipe and hold heat trace in place with Nylon wore tie as shown..
- Connect heating cable to GFCI and power as needed to prevent hoarfrost freezing the vent opening.
- Optional TRF115 or other thermostats may be used for automatic operation and energy savings.

du Alaska Incorporated

6706 Greenwood Street Anchorage Alaska 99518

Phone (907)-522-3004 Fax (907)349-1023